



Small Halt with Ticket Office

Copyright (C) 2017 Wood Valley Works

Assembly Instructions

All wooden pieces of this kit will benefit from a light sanding with fine grade sand paper to remove any surface texture and the pips left by the breakout tabs.

It's recommended that parts are painted or stained prior to assembly as glue residue will not take stain.

This kit is made from 3.5mm laser cut BB/CC exterior grade hardwood ply wood with a water resistant bond which may have blemishes or infill pieces, every attempt will be made to locate these in places where they can't be seen but this is not always possible.


Any type of exterior wood adhesive is suitable, glues of the SUPER-GLUE type are not suitable and should be avoided.

Cut the breakout tabs with a sharp modeling knife rather than snapping the parts out as this may cause damage to the wood.

Before you start assembly Please read through these instructions carefully and familiarize yourself with the pictures and method of assembly.


It will be necessary to have a few tools to hand such as clamps, a sharp modellers knife, snipe nose pliers and elastic bands.

Most parts can be dry assembled prior to gluing so you can familiarize yourself as to how the parts fit together.

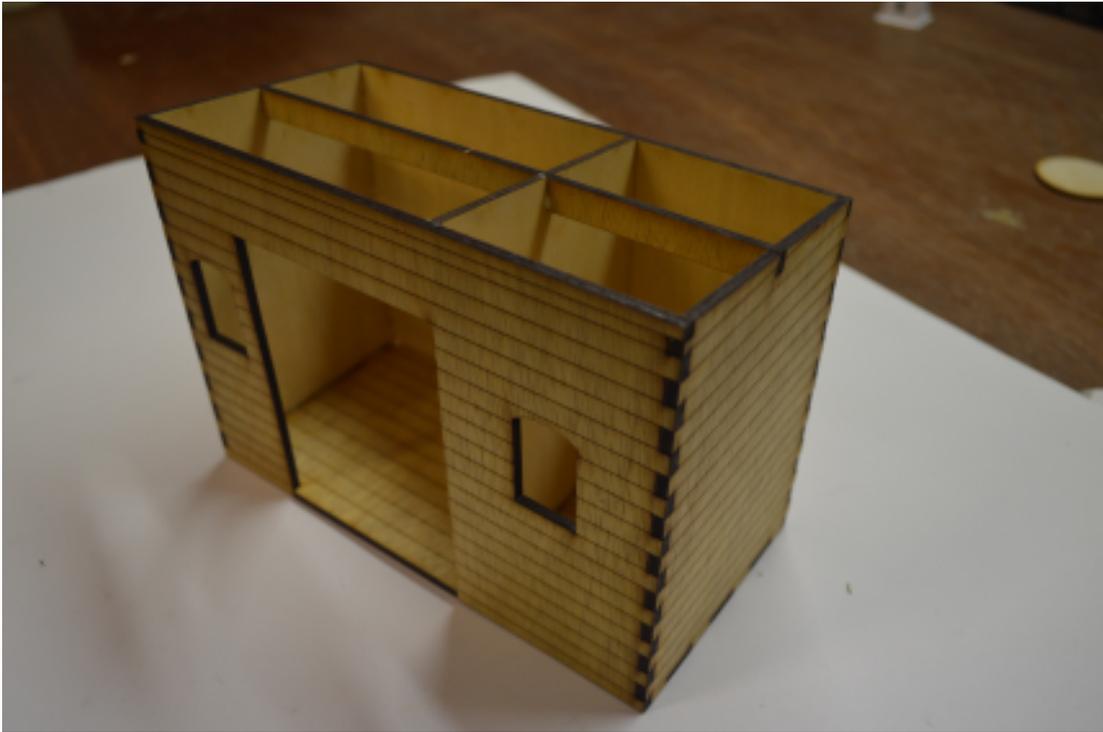

Assemble and glure together the front, sides and back to the floor ensuring that the engraved lines are facing outwards, the engraved lines on the floor are facing up and the engraved lines on the internal partition are facing inwards.

Fit the roof cross member and hold whole assembly together with elastic bands untill the glue has set

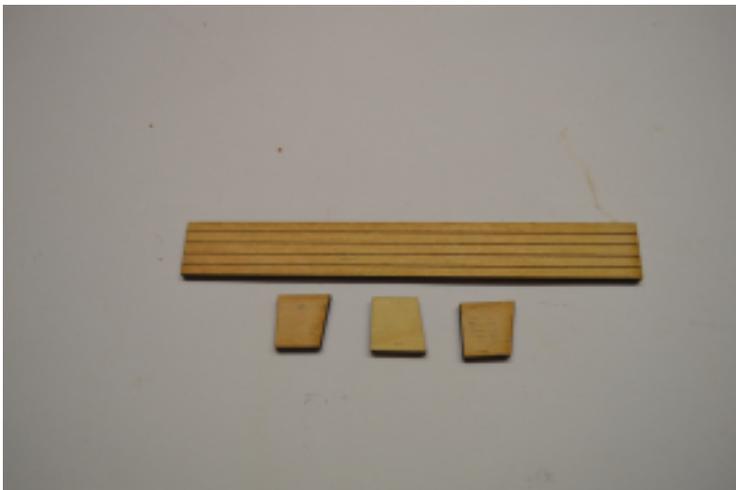

Locate the seat and the 3 seat supports.




Glue the 3 seat supports to the floor and the back, one at each end and one in the middle, ensuring that the widest part is at the top.




Glue the seat to the top of the seat supports and to the back ensuring that the engraved lines are facing up.




Locate the 3 detailing pieces that make up the side and front of the roof.

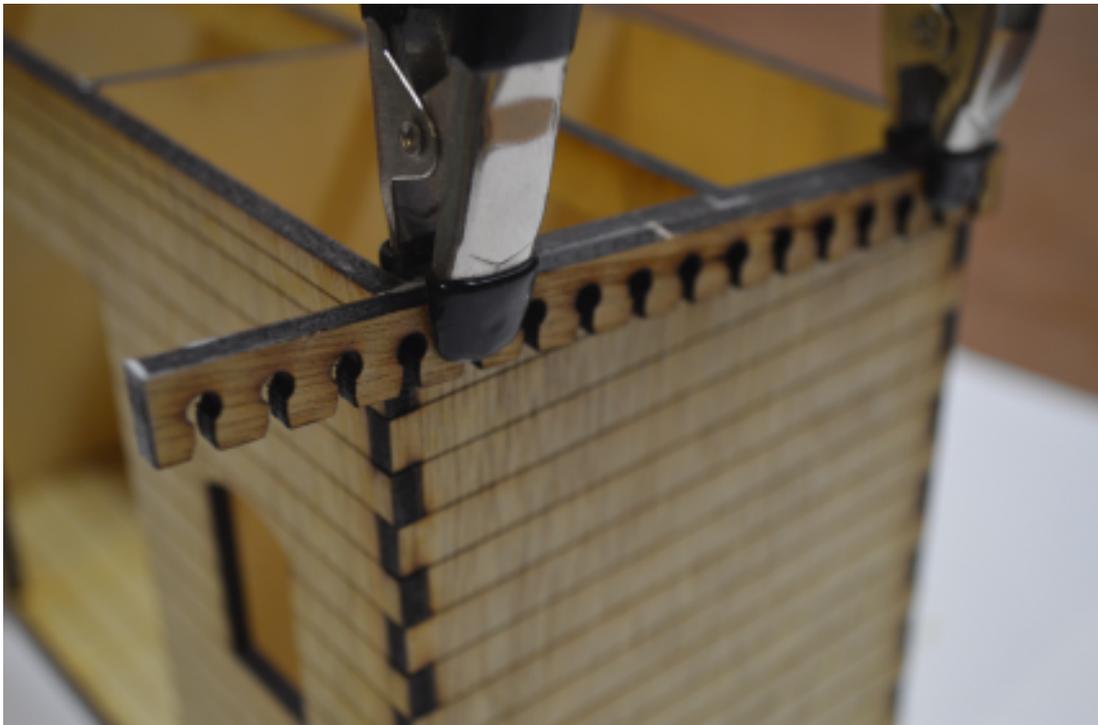

Glue and clamp the side pieces into place ensuring that the flat edge is lined up correctly with the back and the top of the side.

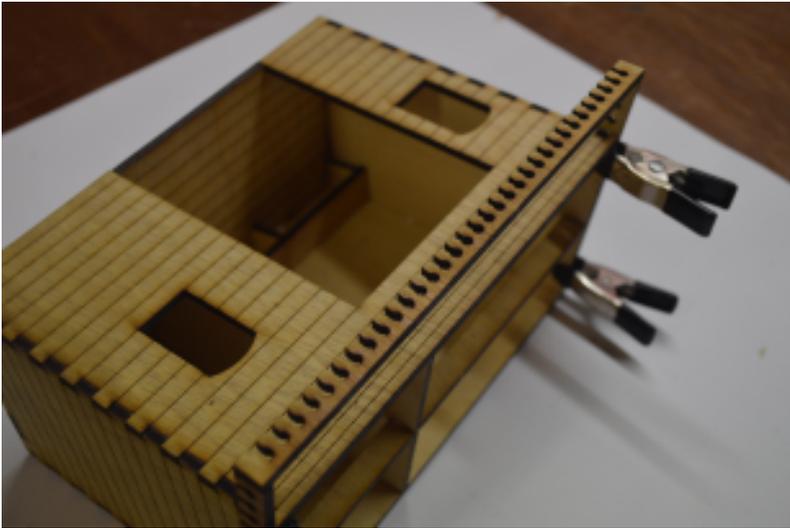

Glue the front detailing piece between the side pieces.

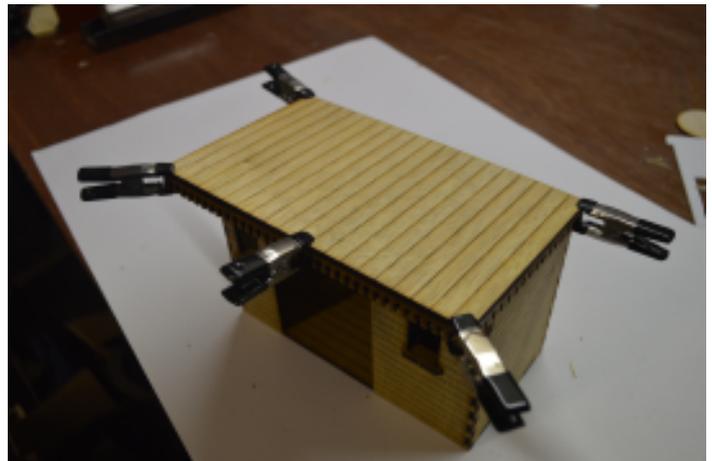


Fit the roof ensuring that the engraved lines are facing up and that it is aligned correctly with the sides, front and back.



Locate the 2 window boards and glue them into the window frames, ensuring that the engraved lines are facing up.



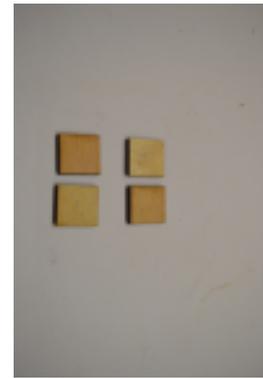

Finally glue the 4 feet into place on the underside of the floor.

